



Lenco®

QUICK-GUIDE IR-2100


Preparation / installation:

Connect the AC Cord into the socket on the back.

For FM mode, extent the antenna

Connect an ethernet-RJ45-network-cable into the RJ45 socket on the back of the unit if you use Wired Ethernet. Make sure this cable is also connected to the network that provides the internet connection.

During the first startup, the display will show the following screens:

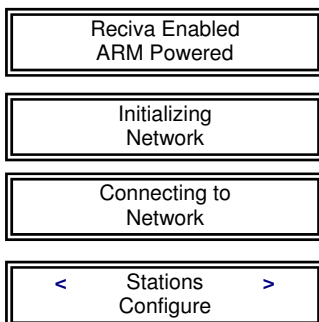

NOTE:
Selected option is displayed with < >

You can now choose to listen to FM radio or to configure the network. If you choose to listen to FM radio press the "mode" button to switch to FM mode (also see **FM Radio**).

If you choose to configure the network, then proceed as follows:

- 1 press tuning "Up"/ "Down" to select "**Configure**", press "select"
- 2 press tuning "Up"/ "Down" to select "**Network Config**", press "select"
- 3 press tuning "Up"/ "Down" to select "**Wired/Wireless**", then press "select"


- 4 press tuning "Up"/ "Down" to select "**Auto**", "**Wired Only**" or "**Wireless Only**". If you only use Wired or Wireless(Wi-Fi) you can select "**Auto**" (default), if you have both connected then you should select the connection you want to use.

When you have a wired connection then the installation is finished, if you have a wireless connection (Wi-Fi) then proceed as follows:


- 1 press tuning "Up"/ "Down" to select "**Wireless Only**", then press "select"

NOTE: We select "Wireless Only" here because we want to make sure the device will search for an access point. Once everything is configured you can choose to set back the system connection to "auto".

- 2 press tuning "Up"/ "Down" to select "**Scan for network**", then press "select", the device will search for the available access point.
- 3 once an access point is found press "select"
- 4 when the network needs no WEP or WPA code, the display will show as follows:

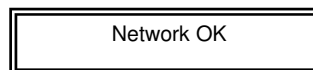

- 5 if the network needs a WEP or WPA code, then the device enters the code entry mode after three seconds:

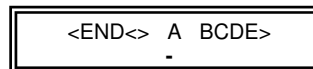


- 6 press tuning "Up"/ "Down" to select each character of the code, press "select" to confirm the character.


NOTE: WEP and WPA codes are case sensitive to upper and lower case characters.

- 7 after the final character, press tuning "Up"/ "Down" to select "**END**", press "select" to confirm

- 8 the device will now try to connect to the network:

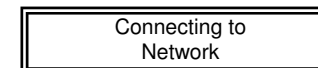


- 9 after the connection is established and the code/key is approved, the display will show as follows:

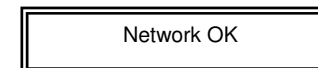

Internet Radio

- 1 press "Mode" to switch to Internet radio mode
- 2 the device will connect to the network and show the following screen:

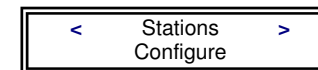

- 3 press tuning "Up"/ "Down" to select "**Stations**", press "select"
- 4 press tuning "Up"/ "Down" to select "**Location**" or "**Genre**", press "select"
- 5 press tuning "Up"/ "Down" to select a specific location or a specific genre, press "select" to confirm your item of choice, the display will now show the number of stations that are loading.
- 6 press tuning "Up"/ "Down" to select the station of your choice, press select, the station will be loaded
- 7 after a station is loaded, press tuning "Up"/ "Down" to select another station from the same station list

FM Radio

- 1 press "Mode" to switch to FM mode
- 2 press tuning "Up"/ "Down" for 2 seconds to auto search for a different radio station, press "Up"/ "Down" shortly to search manually in 50KHz steps

Please refer to the manual for a more detailed explanation about the internet radio's functions and features.