



Lenco

 
QUICK-GUIDE IR-3000

Preparation / installation:

Connect the AC Cord into the socket on the back.

Connect an ethernet-RJ45-network-cable into the RJ45 socket on the back of the unit if you use Wired Ethernet. Make sure this cable is also connected to the network that provides the internet connection.

During the first startup, the display will show the following screens:

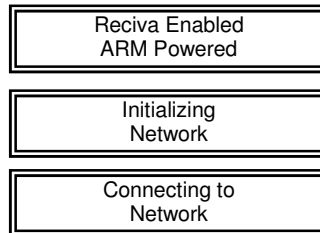

If you choose to configure the network, then proceed as follows:


- 1 press "Tune/Select" to select "**Configure**", press "Tune/Select"
- 2 press "Tune/Select" to select "**Network Config**", press "Tune/Select"
- 3 press "Tune/Select" to select "**Wired/Wireless**", then press "Tune/Select"
- 4 press "Tune/Select" to select "**Auto**", "**Wired Only**" or "**Wireless Only**". If you only use Wired or Wireless(Wi-Fi) you can select "**Auto**" (default), if you have both connected then you should select the connection you want to use.

When you have a wired connection then the installation is finished, if you have a wireless connection (Wi-Fi) then proceed as follows:


- 1 press "Tune/Select" to select "**Wireless Only**", then press "select"

NOTE: We select "Wireless Only" here because we want to make sure the device will search for an access point. Once everything is configured you can choose to set back the system connection to "auto".

- 2 press "Tune/Select" to select "**Scan for network**", then press "Tune/Select", the device will search for the available access point.
- 3 once an access point is found press "Tune/Select"
- 4 when the network needs no WEP or WPA code, the display will show as follows:

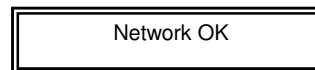


- 5 if the network needs a WEP or WPA code, then the device enters the code entry mode after three seconds:

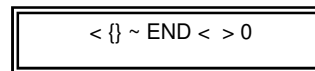


- 6 press "Tune/Select" to select each character of the code, press "Tune/Select" to confirm the character.

NOTE: WEP and WPA codes are case sensitive to upper and lower case characters.

- 7 after the final character, press "Tune/Select" to select "**END**", press "Tune/Select" to confirm
- 8 the device will now try to connect to the network:

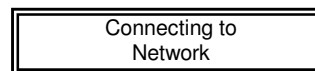


- 9 After the connection is made and the code is accepted, the display will show:

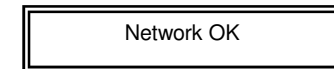


Internet Radio


- 1 press "Mode" to switch to Internet radio mode
- 2 the device will connect to the network and show the following screen:

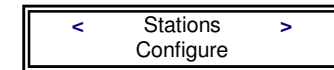

- 3 press "Tune/Select" to select "**Stations**", press "Tune/Select"
- 4 press "Tune/Select" to select "**Location**" or "**Genre**", press "Tune/Select"
- 5 press "Tune/Select" to select a specific location or a specific genre, press "Tune/Select" to confirm your item of choice, the display will now show the number of stations that are loading.
- 6 press "Tune/Select" to select the station of your choice, press select, the station will be loaded
- 7 press the "preset" button. The following will show on the LCD display:

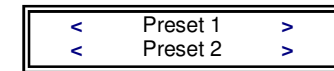

- 8 Turn the dial until Preset 1 is showing.
- 9 Hold the "Select" button for about 3 seconds, until the screen displays:

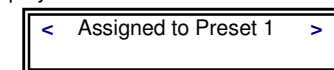

Please refer to the manual for a more detailed explanation about the internet radio's functions and features.