


MMS-201

Quick Guide

1. Controls and Connections

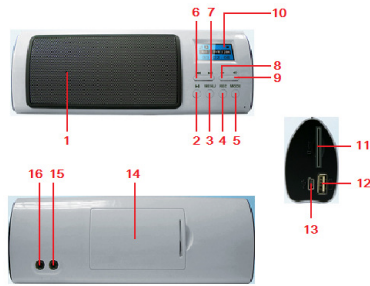

- (1) **Speaker** (Mono)
- (2) **▶|** Button (Play/ Pause, Power On/Off)
- (3) **MENU** Button (Menu / Enter)
- (4) **REC** Button (Record, Record Stop and Save)
- (5) **MODE** Button (Change mode)
- (6) **◀◀** Button (Back, Fast-Backward, Down)
- (7) **▶▶** Button (Next, Fast-Forward, Up)
- (8) **🔊** Button (Volume Down)
- (9) **🔊** Button (Volume Up)
- (10) **LCD** Display
- (11) **Memory Card Slot** (SD Card)
- (12) **USB Port** (for USB Disk)
- (13) **Mini USB Port** (PC Connection / Charge)
- (14) **Battery Compartment**
- (15) **Line In Jack**
- (16) **Earphone**

2. Connecting to a computer

- Make sure that the computer is turned on. Connect the player to the computer by using the USB cable. Now the computer will detect and install the driver automatically. Once the installation is complete, the player will be displayed in "My Computer" or for MAC users on the desktop.

Note: For Windows 98/98SE the driver needs to be installed first.

- the player is ready for media files upload / download with your computer.

3. Insert SD Memory Card / USD Disk

- The MMS-201 is design without an internal memory; it needs insert a SD memory card, and / or a USB disk, as storage memory to the player.
- You can upload your desired music files to the SD memory card / USB disk direct from you computer.

4. Downloading the User's Manual

- For consider environment protection, download the soft-copy of the detailed User Manual via www.lenco.eu our website.

Note: To open the user manual the computer needs to have a .pdf reader. You can download a .pdf reader for free via <http://get.adobe.com/reader/>