

Lenco

L-3807 replacing the needle

Replacing the needle.

1. Press with a finger on point A and press with a finger on point B.
2. Carefully pull the needle (orange part) with your other hand into the direction of arrow 1 to disconnect it from the cartridge (make sure there is enough counter pressure with finger A+B).
3. Remove the plastic protection cover from the new cartridge and carefully remove the needle.
4. Press with a finger on point A and press with a finger on point B.
5. Carefully push the needle (orange part) with your other hand into the opposite direction of arrow 1 to connect it with the cartridge (make sure there is enough counter pressure with finger A+B).

