

 
Lenco

L-81 Frequently asked questions

Choose between changing the needle or the complete cartridge.


Replacing the needle (advised)

1. Remove the old needle (yellow part) from the cartridge by pulling carefully in the direction of arrow 1 and than arrow 2.
2. Remove the needle from the new cartridge in the same way.
3. Place the new needle by pressing in the opposite direction of arrow 2 and than arrow 1.
4. Remove the protection cover by pulling it into the direction of arrow 3.

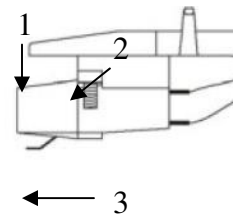

Replacing the complete cartridge

1. Remove the head shell from the tone arm as follow:

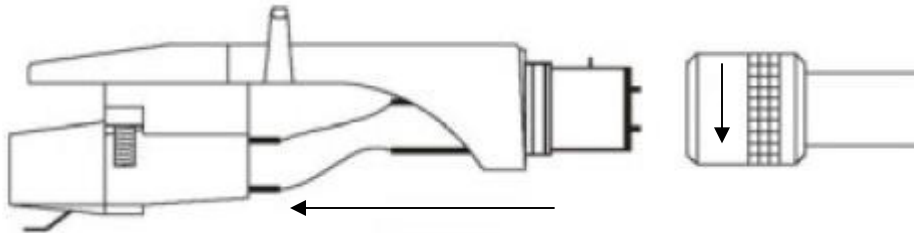

2. Remove the mounting screws.
3. Carefully disconnect the cables between the head shell and the cartridge.
4. Connect the cables to the new cartridge.
5. Place the mounting screws.
6. Place the head shell back into the tone arm by pushing and turning into the opposite direction as you have done by point 1.

Attach wires as follow:
White (L+) Left channel +
Blue (L-) Left channel -
Red (R+) Right channel+
Green (R-) Right channel -

New Encoding software

Download free of charge the newest Audacity software via <http://audacity.sourceforge.net>