


Lenco DC-511 Manual

For information and support, www.lenco.eu

1. Get to know your camera


- 5.0 Mega pixels resolution sensor
- Digital still camera
- Digital video camcorder
- Built-in flash Light
- 8x digital zoom
- 2.4" TFT color display
- Micro SD card support
- 2xAAA alkaline batteries
- Smile detection
- Anti-shaking still capture

2. Functional parts

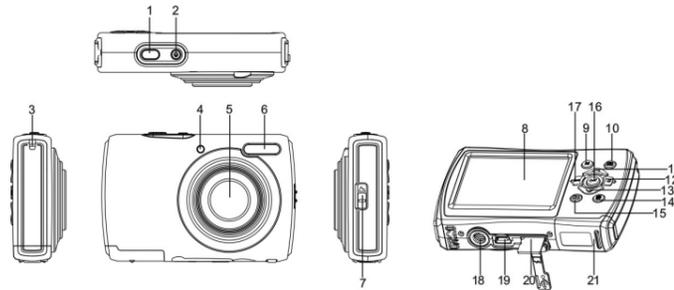

1	Shutter	Press this button to take photographs / start filming.
2	Power on/off button	Press this button to turn on, press again to turn off.
3	Strap hook	Hook for attaching the wrist strap to the camera.
4	Busy indicator	When the indicator is blinking, the camera is busy
5	Lens	Note: Keep the lens clean. Dirt and fingerprints will affect the quality of the picture.
6	Flash light	Use the built-in flash to give the subject extra lighting if it is in dark surrounding (the best flash distance is recommended within 1.5m).
7	Macro switch	Macro mode: Select this mode to take close-up photographs (distance 11cm - 18cm). Normal mode: Select this mode to take photographs from 0.5m - infinity.
8	LCD screen	
9	Mode	Press it to select PHOTO/VIDEO mode.
10	Menu	Press it to enter camera setting mode.
11	Up	Up & Digital zoom in.
12	Right/Flash light	For RIGHT selection in menu mode. For flash light function selection in photo mode.
13	Down	Down & Digital zoom out.
14	Delete	Press it to delete the photos/videos in playback mode.
15	Playback	Press it to enter playback mode.
16	Enter	To start /stop recording a video clip in playback mode, or to confirm changes in menu mode.
17	Left / EV±	For LEFT selection in menu mode. For exposure value set up in photo/video mode.
18	Tripod connector	To fix the camera on tripod (not included).
19	USB interface	Via this connection, you can connect to a computer.
20	Micro SD card slot	SD card storage location.
21	Battery door	Door for battery.

3. Explanation of the status icons

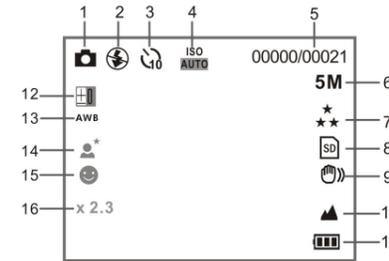

Item	Function	Description
1	Mode selected	Photographs mode. Videos capture mode. Photo playback mode. Video playback mode.
2	Flash indicator	Force flash: The flash is on in any environment. Auto flash: The camera determines if the flash should be used or not. No flash: The flash is turned off.
3	Self-timer	10s Timer
4	ISO	Light Sensitivity select.
5	Photo/Video counter	Photo mode: No. of pictures had been taken. Video mode: Recording time in second. Playback mode: No. of pictures or video file.
6	Selected resolution	12M = 4032x3024; 8M = 3264x 2448 5M = 2560x1920; 3M = 2048x1536; 1.3M = 1280x960; VGA = 640x480
7	Picture quality	☆☆ Super fine. ☆☆ Fine. ★ Normal.
8	Micro SD card indication	The Micro SD card is inserted and will be used as storage for PHOTO and VIDEO
9	Brightness alert	Alert user to hold the camera steadily.
10	Normal/Macro mode indicator	Mode (0.5m – infinity). Macro mode (11cm – 18cm).
11	Battery indicator	The batteries are full. The batteries are empty.
12	Exposure value	Show EV ± value.
13	White Balance	White balance selection.
14	Scene mode	Landscape/Backlight/Night scene/Portrait/Sports
15	Smile detection	On/off
16	Zoom indicator	Showing zoom ratio.

4. Details for camera setting


Category	Item	Setting	Description
Still	capture Mode	Single / 10s Timer	Single or 10s timer selection
		Resolution	12M pixel resolution 4032 x 3024 8.0M pixel resolution 3264x 2448 5.0M pixel resolution 2560 x 1920 3.0M pixel resolution 2048 x 1536 1.3M pixel resolution 1280 x 960 VGA resolution 640 x 480
	Quality	Super Fine/Fine/Normal	Picture quality setting
	Sharpness	Strong/Normal/Soft	Sharpness setting
	White balance	Auto	Automatic white balance
		Daylight	White balance selected for daylight surrounding
		Cloudy	White balance selected for cloudy surrounding
		Tungsten	White balance selected for tungsten lighting
	Scene	Fluorescent	White balance selected for fluorescent surrounding
		Auto/Landscape/Backlight/Night scene/Portrait/Sports	Scene setting
ISO	Auto/50/100/200	Sensitivity select	
Smile detection	On / Off	Smile detection setting	
Anti-shaking	On / Off	Anti-shaking setting	
Video	Resolution	VGA 640 x 480 QVGA 320 x 240	Video resolution set up
	Date/Time	YY/MM/DD	Date or time setting
Setup	Auto power off	Off / 1Minute / 3 Minutes	Auto power off selection
	Beep sound	Off/On	Beep sound setting
	Language	English/T-Chinese/S-Chinese/French/Deutsch/Italian/Spanish/Portuguese/Japanese	Select display language
	Date stamp	Date & Time /Date /Off	Date stamp
	Frequency	50Hz / 60Hz	Select power frequency in your location
	Format	Internal Memory/SD card	Format the memory location selection (all data will be lost).
	Default setting	Cancel / OK	Default setting
Version		See the firmware version	

Note: The camera will remain the last setting when it is turned off.

5. Using the camera

5.1 Installing the batteries

- Open the battery door.
- Insert 2xAAA alkaline batteries into the camera.
- Close the battery door.

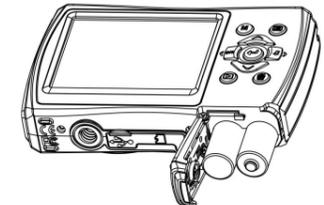


5.2 Inserting a memory card (not included)

Follow the instructions given below to insert the optional micro SD memory card into the camera.

1. Turn off the camera first.
2. Open the card bar.
3. Insert the micro SD card into the camera.

Note: There is only one right direction to insert the micro SD memory card into the slot. Do not force the card into the slot, or else it may damage both the camera and the micro SD memory card.

Note: The micro SD memory card must be formatted before taking photographs. See the following sections for more information.

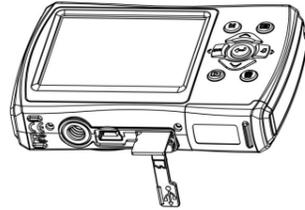

5.3 Formatting the memory or micro SD card

1. Press the menu button () in PHOTO or VIDEO mode.
2. Select the setup mode by press the right button.
3. Select the format icon by press the () button and press the ENTER button () to confirm.
4. Select Internal memory / SD card then press the ENTER button.

5.4 Setting the resolution

The camera can be set to different resolutions.

1. Press () button in PHOTO mode, select the resolutions icon by () key and press the ENTER button () to confirm.
Resolutions: VGA (640 x 480), 1.3M (1280 x 960), 3M (2048 x 1536), 5M (2560 x 1920), 8M (3264x 2448), 12M (4032 x 3024)
2. Six different resolutions will be displayed. Select the desired resolution by using the up or down buttons and press the ENTER button to confirm the selection.

5.5 Taking photographs

1. Turn on the camera.
2. Depending on the distance to the object being photographed, use macro switch to adjust the distance. Select the flower symbol () if you wish to take a close-up photograph (11cm –18cm).
If you wish to take video or photograph of surroundings or people (0.5m – infinity), set the macro switch to normal mode ().
3. If you are not sure if there is enough lighting, turn the automatic flash () on by pressing the flash button. (If the battery power is too low, the flash won't be activated).
4. Use the LCD screen to aim the object you wish to take photograph.
Use the face detection to aim the people you wish to take photograph.
Press SHUTTER button and wait until the LCD display turn on again.
5. Press SHUTTER button and wait until the LCD display turn on again.
6. If 'SMILE' detection is ON, shutter will be activate automatically once a smile face is detected

Caution: 1) Taking picture for fast-moving object is not recommended.
2) Image may be distorted when taking picture in a moving vehicle.

5.6 Zoom in and out

The camera can zoom in up to 8 times.

Zoom in or out by pressing the up or down button, a number will appear on the display, 8.x is the maximum zoom ratio.

5.7 Self-timer setting

You can use the self-timer function when you wish to take a photograph for yourself or when you wish to take a photograph for an object which the camera must be as still as possible.

1. Set the camera to photo mode.
2. Press the MENU button (). The menu will appear.
3. Press the down button to select Capture Mode and confirm by pressing the ENTER button.
4. Press the down button to set the delay time: 10S Timer.
5. Press the ENTER button to confirm. The self-timer function is now ready for use.
6. Aim at the object you wish to take photo.
7. Press the SHUTTER button to take a photograph.

8. The photo will be taken after the timer reaches the delay time of 10s and the camera will beep during the delay time.

5.8 Recording video clips

1. Press the MODE button to select the video clip mode ().
2. For setting the resolution, Press MENU button and select Resolution, then press the ENTER button to confirm. Two resolution will be displayed.
VGA (640 x 480) QVGA(320 x 240).
3. Press the SHUTTER button to start recording video, press the SHUTTER button again to stop recording. The video clip will now be saved as an AVI file in the camera memory.

5.9 Playback photographs

1. Press the () button to get into playback mode.
2. Press the left or right buttons to see photographs.
3. In full screen display , press the up button to zoom in the photo.
4. To view images in thumbnail, press down button.
5. To shift the image in zoom-in mode, press the ENTER button then use the up/down/left/right buttons.
6. Press the MENU button, select SLIDE SHOW, and then press the ENTER button to confirm. The pictures saved in your camera or your micro SD card will be displayed in sequence automatically.

5.10 Playback video clips

1. When video clips are displayed, press the ENTER button to start playing the video and press the ENTER button again to pause the playback.
2. press right button to fast forward or press left button to rewind.
3. Press the down button to stop.
4. Press the () button again to exit.

5.11 Delete photographs and video clips

You can choose to delete a single photograph / video clip, or delete all the photographs / video clips in the memory.

Follow the instructions given below to delete photograph.

1. Press the () button to enter the playback mode.
2. Press left or right button to select photograph/video clip to be delete.
3. Press the delete button () and select Delete This Image/All ..
4. Press the ENTER button ,then select OK to confirm.
5. Press the () button to exit.

NOTE: Select "All" and Press the ENTER button to confirm, all the pictures and videos will be deleted.

6. Connecting to a PC

The unit can be connected to the computer as mass storage device and transfer photo/video files for storage.

7. Specifications

Sensor	5.0 Mega pixel CMOS sensor
Image resolution	12.0 Mega pixels: (4032x3024)
	8.0 Mega pixels: (3264x 2448)
	5.0 Mega pixels: (2560x1920)
	3.0 Mega pixels: (2048x1536)
	1.3 Mega pixels: (1280x960) VGA: (640x480)
Lens	F/2.8 f = 8.5mm
Focus range	0.5m. ~ Infinity
Macro mode	11cm – 18cm
Digital zoom	8x
Flash strobe	Built-in (Auto / force / off)
LCD display	2.4" TFT color display
White balance	Auto / Daylight / Cloudy / Fluorescent / Tungsten
Video mode	20fps@VGA&30fps@QVGA with micro SD card
External memory card	SD card supports up to 8GB
File format	Picture: JPEG, Video: AVI
Self timer	10 seconds
PC interface	USB 2.0
Power source	2xAAA alkaline batteries

8. System requirement

Operating system	Windows XP / Vista or above Mac 9.x or X.x
CPU	Pentium III or above
RAM	At least 64MB
Interface	USB port
CD	4x speed CD ROM or above

9. Troubleshooting

Problem	Cause	Solution
Cannot turn on the camera	Low battery power. Battery placed at wrong polarities.	Replace or install the battery correctly.
Photos can not be saved when taking pictures.	The memory card or built-in memory hasn't been formatted properly.	Format the memory in setup mode of the camera. Please refer to section 5.3.
Cannot find removable disk after connecting the camera to the computer.	Connection failure.	Make sure all cable connections are secured and restart the computer if necessary.
Flash does not work.	Battery power is too low.	Replace with new 2xAAA alkaline batteries.
The batteries used up very fast.	Incorrect or old, used up, battery	Replace with new 2xAAA alkaline batteries.
The photos are blurry	1. The camera is not held steadily 2. The lens of camera is dirty.	1. Hold the camera steadily until it beeps when taking video photo. 2. Clean the lens with soft dry cloth.

List of accessories:

Camera 1x User manual 1x Handstrap 1x USB cable 1x Pouch 1x



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

For information and support, www.lenco.eu