

Lenco

DF-706

Digital Photo Frame

USER MANUAL



For information and support, www.lenco.eu

Introduction

Precautions and Maintenance

- For indoor use only.
- To avoid risk of fire or electric shock, do not expose this appliance to moisture.
- To avoid overheating, do not block the ventilation holes on the back of this digital photo frame at any time.
- Keep this Multimedia Digital Photo Frame out of sunlight. Direct sunlight may cause damage.
- Do not dismantle the Multimedia Digital Photo Frame. There is a risk of electric shock, and there are no user serviceable parts inside. Dismantling your Multimedia Digital Photo Frame will void your warranty.
- Do not use the Multimedia Digital Photo Frame if conditions could allow condensation to occur, or damage may result.

Cleaning the LCD Screen

- Treat the screen gently. The screen on the multimedia Digital Photo Frame is made of glass and can be easily scratched or broken.
- If fingerprints or dust accumulates on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- If you use the LCD cleaning Kit sold at various retail outlets, do not apply the cleaning liquid directly to the LCD screen. Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please STOP the unit before inserting or removing a card or USB Drive. Failure to do so may cause damage to the card/USB and the unit. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Table of contents

Precautions and maintenance	1
Cleaning the LCD Screen	1
Important Safety Precautions	3
Resource	4
Player Overview	5
Getting Started	6
Memory Card Choice	7
Play Photo File	7
Setup	8
Calender	9
Troubleshooting Guide	10
Specifications	11

Important Safety Precautions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightening storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged. Liquid has been exposed to rain or moisture, does not operate normally or has been dropped.
- This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.



This symbol on the product or in the instructions means that you electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Resource


Inserting Memory Cards

Your multimediaDPF is compatible with the following memory cards:

Secure Digital Card (SD)
Multimedia Card (MMC)
USB drive


Insert the memory card with the screen and slots all facing yourself. Do not force the card in the slot. If you are not able to easily insert the memory card completely, you may have inserted it in a wrong way.

Note:DPF = Digital Photo Frame

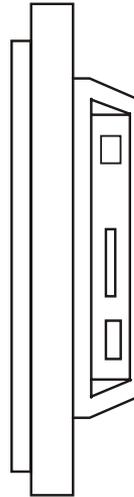

Player Overview

Key control and Key functions:

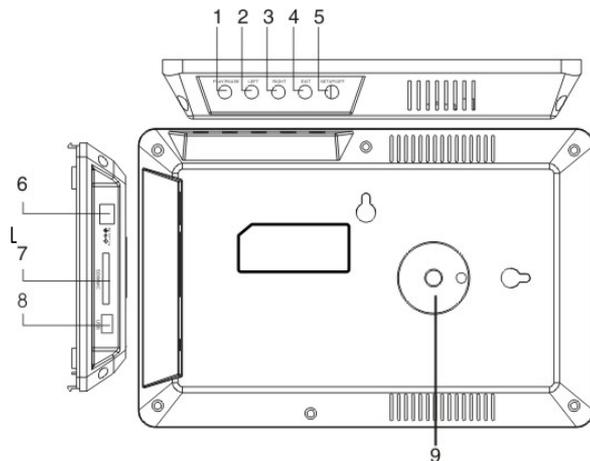


- 1. SETUP BUTTON/OFF:** Used to power on and off the Digital Photo Frame.
- 2. EXIT:** Press EXIT key to return into last interface. Use for setup programs, then by pressing long (above 2 seconds) enter to execute the command.
- 3. RIGHT SHIFT BUTTON:** Right cursor selecting function and next photo.
- 4. LEFT SHIFT BUTTON:** Left cursor selecting function and previous photo.

- 5. ENTER (PLAY/ENTER) BUTTON:** Confirm that what you choosed and Pause or Play.
- 6. DC 5V:** Input for the DC Power Adapter into the DPF.
- 7. SD/MMC/MS CARD:** The slot for DPF player to connect the SD or MMC memory card.
- 8. USB:** Connect to a USB Drive.
- 9. Bracket jack.**

Getting started

Getting started

1. Assemble the Multimedia Digital photo Frame bracket to prop the unit up insert adaptor DC plug into the DPF player first, then plug the power cord to a standard wall outlet. Then the screen will display as below: (will play the pictures automatically stored), If insert the SD/MMC card, then will play the pictures in the card.

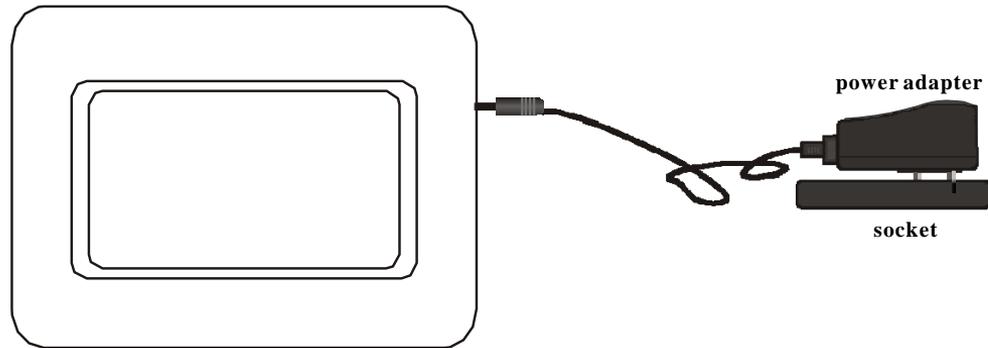

Memory Card Choice

When power on, the digital frame will go into automatic show mode of SlideShow if it is inserted with memory Cards or keeps pictures in the built-in flash. Press EXIT key to return to Photo menu (Fig1).

If the digital frame is not inserted with memory cards or there is no pictures in its built-in flash, then it goes into Photo menu. After memory card inserted, it goes into SelectCards mode (Fig 2).

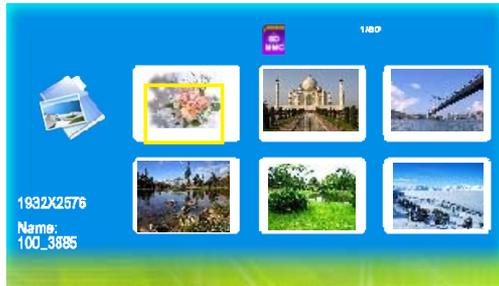


Fig 1



Fig 2

Play Photo File

After memory card inserted, the digital frame goes into Select Cards mode.

Operation:

In Select Cards mode, you can choose different memory cards by ◀ or ▶ key. Press ENTER key after choosing the memory card to go into SlideShow or Photo mode to play pictures (Fig 3). Press EXIT you can return from playing status.



Fig 3

Setup

Operation:

In any menu, press SETUP key to go into the SETUP interface (Fig 4).

Press ▲▼ key to choose the set item.

Use the ENTER button to change the setting.

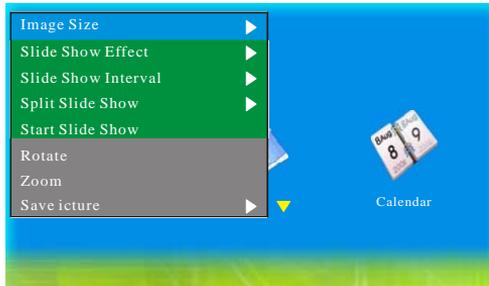


Fig 4

1. Image Size

Allows user change how the images are displayed on the photo frame. Choose between, Auto Fit, Optimal or Full.

2. Slide Show Effect

Allows user to set different effects to the slides when the images change. There are 8 options you can choose from Random, Split Horizontal in, Split Horizontal out, Jalousie, Split Vertical in, Split Vertical out, Radiation, Surround.

3. Slide Show Interval

Allows user to change the speed of the slideshow. The interval speed can be changed from 0 seconds to 1 minute. Use the ▲▼ button to change the setting.

4. Split Slide Show

Allows user to change the Separated Slide Show from On to Off.

5. Start Slide Show

Allows user to choose the start slide show.

6. Rotate

Rotate Photos 90 degrees Clockwise.
(Be effective when preview pictures on full screen)

7. Zoom

Allows user to zoom in and out on files.
(Be effective when preview pictures on full screen)

8. Save Picture

Allow user to copy pictures from memory cards into the built-in flash.
(Be effective when preview pictures on full screen)

9. Delete File

Allow user to delete pictures from the built-in flash.
(Be effective in Photo menu, use Zoom button to select multiple files in Photo menu.)

10. Format Memory:

Formatting the contents of the machine

11. Reset Setting

Allows user to restore default settings.

12. Language

Choose between 2 different languages: English, French.

Setup

13. Brightness

Allows you to change the brightness of the LCD screen.

14. Contrast

Allows you to change the contrast of the LCD screen.

15. Color

Allows you to change the color of the LCD screen.

16. Tint

Allows you to change the tint of the LCD screen.

17. Time

This function allows the user to set the system time.

Calendar



Fig 5

Allow user to setup date and time of the system (**Fig 5**).

Operation:

Press ◀▶ key to choose Calendar in Select Mode, Press ENTER key to go into the calendar interface. In addition to displaying the current data, the user can the navigation key you can preview different year, Month, and day.

Troubleshooting Guide

If you are experiencing problems with your DPF, please consult both this guide and manual. If you need further assistance, please contact Technical Support.

No power:

Please check whether there is power, and that the DC power cord is plugged in correctly.

Display too bright or too dark:

please adjust the brightness or contrast in the setup menu.

Can not read the CARD:

Please check that there is content on the card.

Can not play the file:

Please confirm whether the file format can be played by the player.

The color is light or no color:

Please adjust the color setup.

Specifications

Display: 7" TFT LCD 480(RGB)x234

Power: AC Adapter; Input 100-240V~; Output 5V, 1A

Environmental operating ranges

Operating Temperature: 0~50 degrees

Storage Temperature: 0~60 degrees

Accessories:

**Power Adapter
User Manual**

All specifications and instructions are subject to change without notice.



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)