



Lenco

DVD PLAYER

USER'S MANUAL

Please read this User Manual carefully before using this product and keep this manual for future reference

DVD-433K

For information and support, www.lenco.eu

Introduction Important Safety Instructions	2
Caution	3
Features.....	3
Front Panel and Rear Panel Illustration.....	4
Remote Control.....	5
Connections.....	6
Advanced Features System setup.....	7
MP3/WMA/JPEG/MPEG4 playback.....	10
Picture CD playback	11
USB, Karaoke	11
Others Troubleshooting	12
Specifications.....	13

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when not used for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, when it does not operate normally or has been dropped.
- 14) Main plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate is advised.
- 19) Do not expose the apparatus to dripping or splashing by objects filled with liquids. Vases etc. must not be placed on the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or otherwise.



The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit. This symbol indicates that this product incorporates double insulation between

 


hazardous main voltage and user accessible parts. When servicing use only identical replacement parts.

- Please use the original box and packing materials for safe transportation of this product.
- It is normal for the cover and rear panel to become warm after the player has been active for an extended period of time.
- Do not move this product during playback. Doing so may cause damage to the pickup and the disc.
- Press OPEN/CLOSE on the front panel or remote control to open or close the disc tray. Do not push or touch the tray while it is opening or closing.

Features

Disc formats and features supported by this player:

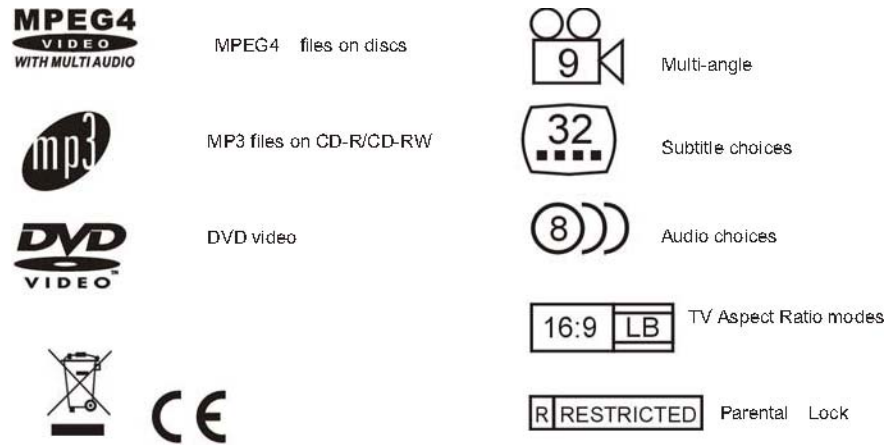


You can help protect the environment! Please remember to respect the local regulations: hand over the non-working electrical equipments to an appropriate waste disposal center.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.


The product complies with the Picture CD format and will display Picture CDs.

 Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

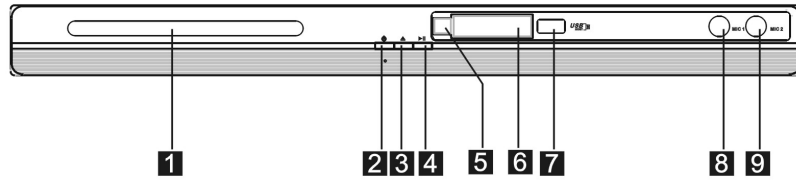

Front Panel

 - 1. **Tray Door**
- 2. **Power**
- 3. **Open/Close button**
- 4. **Play/Pause Button**
- 5. **Sensor**
- 6. **LED**
- 7. **USB Port**
- 8. **MIC 1**
- 9. **MIC 2**

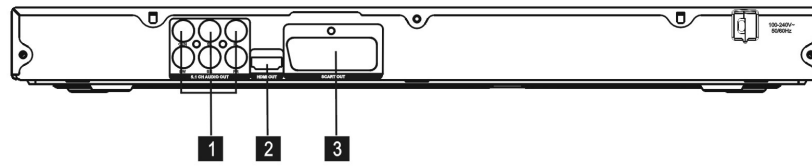

Back Panel

- 1. **5.1CH Audio output(FL,FR,SL,SR,CEN,SW)**
- 2. **HDMI Output**
- 3. **SCART Output**

 
Remote Control



1. OPEN/CLOSE
2. POWER
3. 0-9 NUMBER KEY
4. ZOOM/MENU
5. SUBTITLE/TITLE
6. SETUP
7. UP
8. LEFT
9. DOWN
10. REVERSE
11. FORWARD
12. PREVIOUS
13. NEXT
14. MUTE
15. USB
16. GO TO
17. AUDIO/ANGLE
18. REPEAT/ PROGRAM
19. PLAY/PAUSE
20. STOP
21. RIGHT
22. OK
23. VOLUME INCREASE
24. VOLUME DECREASE
25. DISPLAY
26. KARAOKE

- Press 4, 5, 17, 18 for more than 1.5s, there will be functions marked on these buttons(MENU, TITLE, ANGLE, PROG).
- Press 4, 5, 17, 18 for less than 1s, there will be functions marked above these buttons(ZOOM, SUBTITLE, AUDIO, REPEAT).
- CONNECT DVD PLAYER TO TV SET WITH SCART SOCKET

Connections

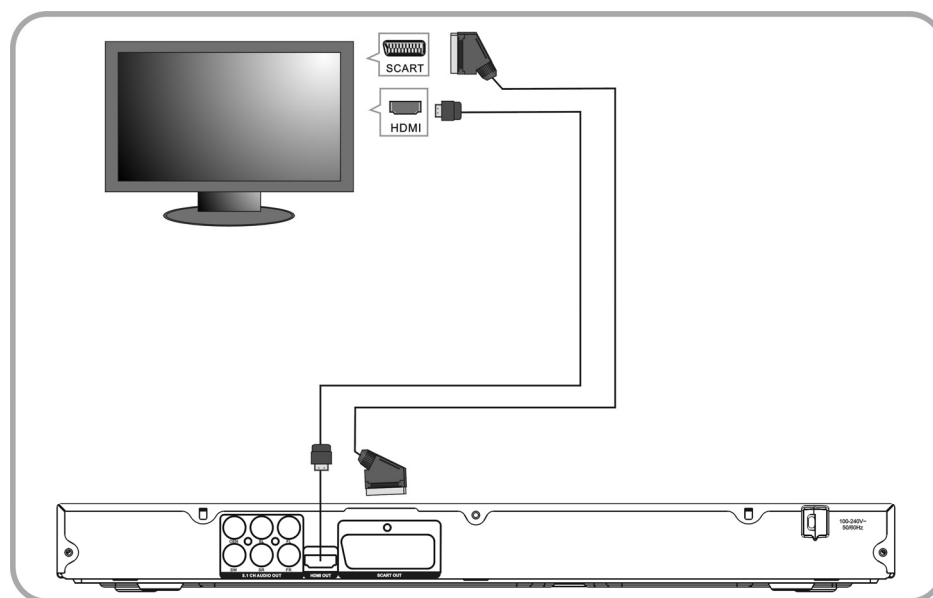

- Connect DVD player to TV set with scart socket
Use the SCART cable to connect DVD player and your TV. Set the [Video Out] to [Composite] or [RGB].
- **CONNECT DVD PLAYER TO TV SET WITH HDMI CABLE**
Use the HDMI cable to connect DVD player and your TV. Set the [Video Out] to [HDMI].

 
System operation

Press the **SETUP** button on the remote control, the **SETUP MENU** will be displayed. Use the up/down buttons for up and down movement through the menu. Press **RIGHT** direction button to enter the submenu and press left direction button to go back to the previous menu. Confirm the adjusted settings by pressing the **OK** button

MENU OPERATION

LANGUAGE SETUP

Select **Language** in the setup menu and the **Language** submenu will be displayed:

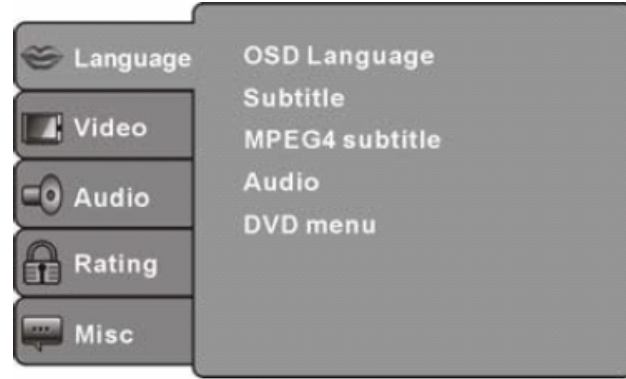

OSD Language

Use this item to select the language of the setup menu and screen display.

Subtitle

Use this option to select the default subtitle language.

Note: Not all dvd-players support this option.

MPEG4 Subtitle

Select different MPEG4 subtitle encoding option.

Note: Not all dvd-players support this option.

Audio

Use this option to select the default disc language.

Note: Not all dvd-players support this option.

 
DVD Menu

Use this option to select the default menu language.

Note: Not all dvd-players support this option

VIDEO SETUP

Select **Video** in the setup menu and the **Video** submenu will be displayed:

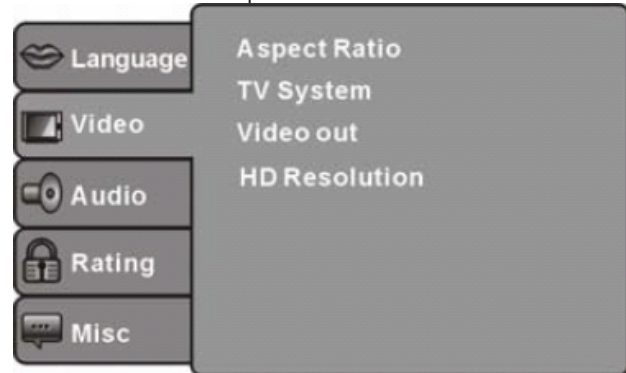


System Setup

Select down sampling function on or off. (Down sampling is the process of reducing the sampling rate of a signal)
Press ON: down sampling rate will change into a higher level sampling rate audio (more than 96K). OFF: Disable this function.

Down sampling

RATING SETUP

 Select **Rating** in the setup menu and the rating menu will be displayed:

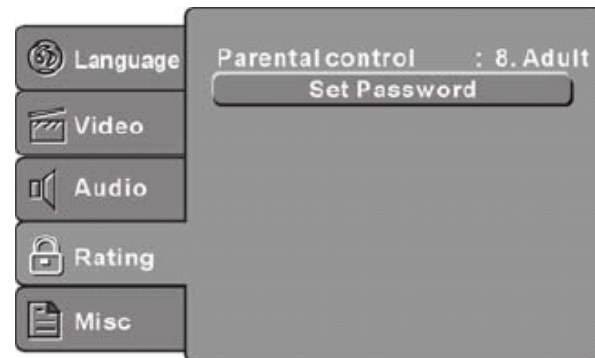

Parental Control

Personalize the parental control feature of the dvd-player

 
Note: Password is needed before setting Parental Control.

Set Password Input four digits (password), then press **OK** to confirm.

Note: To reset forgotten password, please use the universal password 6666 to unlock.

MISC SETUP

Select **MISC** in the setup menu and the MISC will be displayed

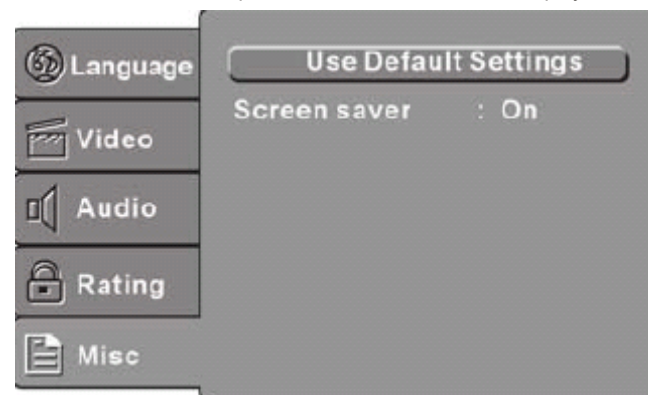

Use Default Settings

Reset setup data to factory default settings.

Screen Saver

Enable/disable the screen saver function.

MP3/WMA/JPEG/MPEG4 Playback



The MP3/WMA/MPEG4 disc has the directory structure as shown in the picture above. Press **Direction key** to choose the root directory (the first **directory** in a hierarchy) and then press the **OK** button to enter the sub directory. Use **Direction keys** to choose the desired track and press **OK** to play the selected file. To return to the upper menu, press **Direction keys** and choose , press **OK** button to go back to the upper menu. Use direction keys to enter the play settings menu (*right part of the screen*). Open option submenu by pressing **OK**. Select desired setting and confirm with **OK**

Option menu

Filter: it allows user to select categories of files displayed in the browser list.

Repeat: it allows user to switch to a different repeat playing mode

Mode: How to select different playing modes:

Normal: Normal playback.

Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track

Music Intro: In this mode, the media will play 10 seconds and then skip to next data.

*Edit Mode: Use this option to enable programmed playback mode. Select the mode, press **LEFT Direction key** to directory and press **OK** to choose the desired track and press **Add to program** to program the playback list.*

Program view: Display directory/folder.


Browser view: Display playback list directory.

*Add to program: Use this in combination with **Edit Mode** to create a playlist.*

*Clear program: When entered the **Browser View** and in complete stop state (press **STOP** button twice), use this option in combination with **Edit Mode** to delete tracks from the playback list.*

Picture CD playback

The PICTURE CD disc has a directory structure as shown in the following picture.

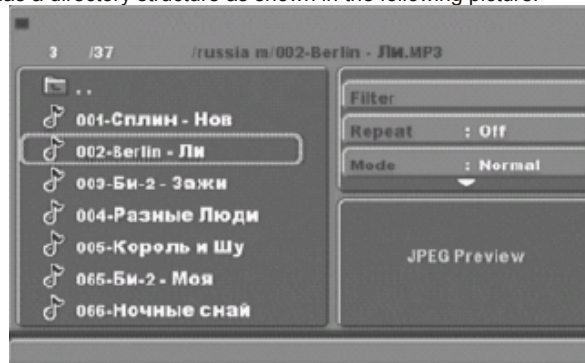 

Press **Direction key** to choose the root directory (the first **directory** in a hierarchy) and then press the **OK** button to enter the sub directory. Press the **Direction key** to choose the desired picture and then press **OK** to open the chosen picture. When picture is shown on screen the slideshow will start automatically. Press the **Play/Pause** button to pause or to resume playing of the slideshow. To return to the upper menu, press **Direction key** to choose the icon and press the **OK** button. To rotate the image (**Image rotation**) In the picture play state, press **Direction key** to rotate the picture, press ANGLE button to change the picture scan mode.

USB, KARAOKE

USB

Before entering the **USB Mode** make sure there is no CD/DVD in the tray, *(when there is, please remove it)*. Insert a USB device or MP3 Player in the USB Interface to play the MP3 music or/and JPEG files. The controls are equal to playing a disc, see chapter MP3/WMA/JPEG/MPEG4 playback. To open the **USB Interface Mode** press the USB button and use the direction buttons to select USB Mode. Enter by pressing OK.

Note: *This system does not support all USB devices. If the file name contains special unknown symbols, the file cannot be read.*

Warning: The USB memory stick should be plugged in the unit directly. Do not use a USB extension cable. This can lead to failing of data transferring and can cause interference.

KARAOKE

1. Connecting the microphone. Please insert your microphone to the MIC jack on the front panel..
2. Press Start
 - A. Put the DVD or VCD disc in the tray.
 - B. Press the KARAOKE button on the remote control to select function.

Note: *Please set karaoke off if you want 5.1CH audio output when playing a 5.1CH disc.*

Troubleshooting

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

"BAD DISC" DISPLAYED

- Ensure the disc is not distorted, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

PICTURE BUT NO SOUND

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in VOUCH setup.
- Ensure you have set the player's AUDIO settings correctly.
- Ensure you have entered the correct AV input for your TV
- Ensure the audio is not set to mute.

REMOTE CONTROL IS NOT WORKING

- Make sure the Main units POWER button is on
- Ensure the batteries are working.
- Point the remote control directly at the player's Infra red sensor
- Remove any obstacles between the remote and the Infra red sensor.

SOUND BUT NO PICTURE

- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

UNIT NOT WORKING

- Turn off the power, then turn it on again.

POOR PICTURE OR SOUND

- Ensure you have set the player's AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

"NO DISC" DISPLAYED

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

Specifications

Power requirements: AC 100-240 Volt, 50/60Hz Power consumption: 15W Video standard: NTSC/PAL Discs
Compatibility: MPEG4,DVD,DVD+/-R/RW,VCD,JPEG.CD-DA,CD-R, CD-RW

Video out

Video out: 1.0V(p-p)/75., sync, negative polarity

Audio out

Audio out level: 2Vrms -1/+0.2 Frequency response: 20Hz to 20kHz S/N ratio: >90dB Total harmonic distortion:
<0.025%

Accessories

Remote Control x 1 User's Manual x 1 Microphone x 2

Note: Specifications are subject to change without notice.

For information and support, www.lenco.eu



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)