

# Lenco

## USER MANUAL

### PORTABLE DVD PLAYER

#### DVP-9411



[www.lenco.com](http://www.lenco.com)


Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.



## Content

Important Safety Instructions .....	1
Panel Illustration.....	2
Connecting to the USB.....	2
Remote Control.....	3
Connecting to a TV set.....	4
MP3/WMA/MPEG4 playing.....	4
PICTURE CD PLAYBACK .....	5
SYSTEM SETUP.....	6
Trouble-shooting.....	7
DVB-T PART.....	8
Specifications.....	9
Other.....	10

## Important Safety Instructions

- \* **Warning:** To reduce the risk of electric shock, do not remove the cover or back. There are no user-serviceable parts inside. Refer servicing to qualified personnel.
- \* **Warning:** To prevent fire or electric shock hazard, do not expose the unit to rain or moisture.
- \* Do not expose the Adaptor and product to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- \* Keep the product away from direct sunlight and heat source such as radiators or stoves.
- \* Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your product on a cushion, sofa or other similar surface.
- \* Do not place the product on unstable cart, stand, tripod, bracket or table.
- \* The unit may fall, resulting in possible damage or injury.
- \* Never place heavy or sharp objects on the LCD panel or frame.
- \* Only use the AC adapter included with product. Using any other adapter will void your warranty.
- \* Unplug the power from the outlet when the unit is not in use.
- \* Attention should be drawn to the environmental aspects of battery disposal.
- \* No naked flame sources, such as lighted candles, should be placed on the apparatus.
- \* **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. 
- \* **WARNING:** Excessive sound pressure from earphones or headphones can cause hearing loss.
- \* **WARNING:** Only use attachments/accessories specified provided by the manufacturer, the product is supplied by AC adapter, the AC adapter is used as disconnect device, the disconnect device shall remain readily operable.

 
 


Warning: The USB memory stick should be plugged into the unit directly. USB extension cable should not be used to avoid failing of data transferring and interference caused.

For the electrostatic discharge (ESD) test of EN55020, it was found that manual operation (by switch power ON/OFF switch) is needed to resume normal operation as intended after the test.

**WARNING:** Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

## Panel Illustration

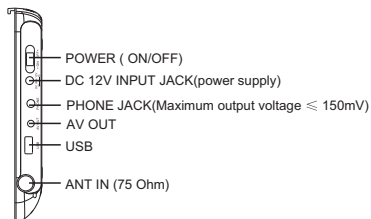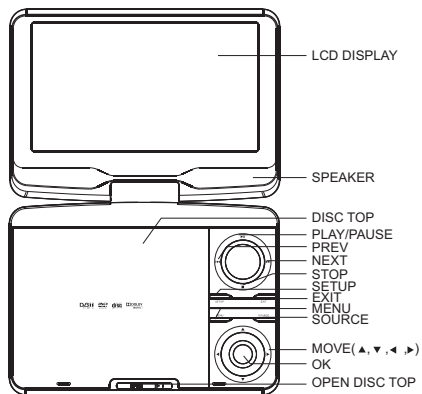


POWER.IR.CHG



## Connect to the USB

 Press the SOURCE key on the remote control until you switched into USB work mode.



### USB interface

This unit has a USB IN jack to play the MP3 music or JPEG files or other files.

Press the <SOURCE> button to choose USB IN mode.

All the functions are the same to play a disc.

 
Note: the USB IN port is compatible with flash memories, it is not warranted the compatibility with MP3 players using owner software.

### NOTE:


When using USB function. Please do not insert in the wrong direction, or it will be corrupted.

### DVB-T

This unit has DVB-T function. Press the <SOURCE> button to choose DVB-T mode.



## Remote Control

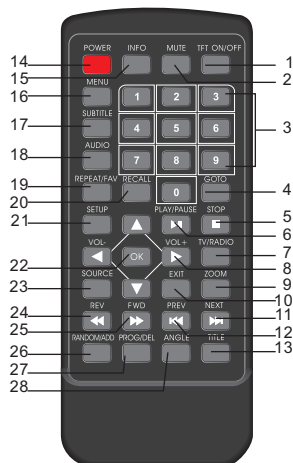 


1. TFT on/off
2. MUTE
3. NUMBER KEYS
4. GOTO
5. STOP
6. PLAY/PAUSE
7. TV/RADIO
8. V+▶, V-◀, CH+▲, CH-▼
9. ZOOM
10. EXIT
11. NEXT
12. PREV
13. TITLE
14. POWER
15. INFO
16. MENU
17. SUBTITLE
18. AUDIO
19. REPEAT/FAV
20. RECALL
21. SETUP
22. OK
23. SOURCE
24. REV
25. FWD
26. RANDOM/ADD
27. PROG/DEL
28. ANGLE

### Preparation of the Remote Control

 Place the remote control on an even surface and insert the supplied button cell into the remote control as follows.

1. Push the button towards left.
2. Pull the battery loader out.
3. Insert the battery into the receptacle make sure the polarity matches the marks inside the component.
4. Insert the receptacle into the remote control.

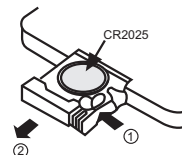

### Cell data

Battery type: 1x CR2025, 3 V  
Service life: approximately 1 year (for normal use and room temperature).

 
### Using Of Remote Control

Point the remote control towards the main unit when operating.  
The remote control works best at a distance less than 5 m and at an angle of up to 30° to the front of the unit. No obstacles may stand in the way between remote control and infrared sensor and do not place the remote control in direct sunlight. If the remote control unit fails to work even when it is operated near the player, replace the battery.



### Notes on batteries

If the remote control is not used for a long period of time, please remove the battery from the compartment.  
Do not heat batteries or dispose of them in fires.  
Do not dismantle, deform or modify batteries.

## Connecting to a TV set

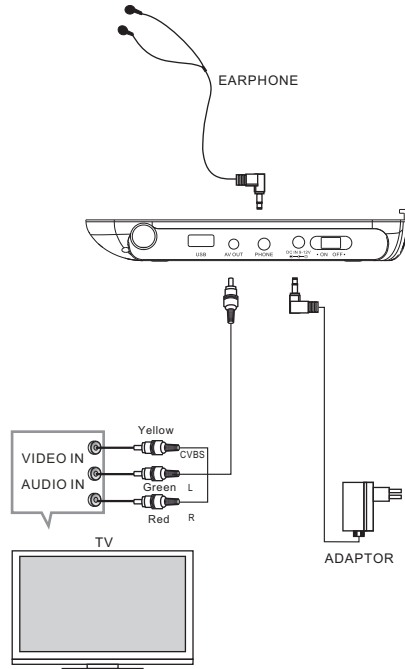

## MP3/WMA/MPEG4 PLAYING

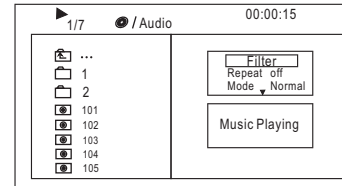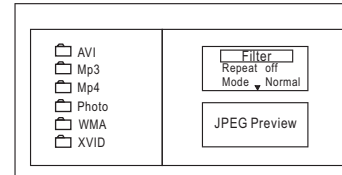  

The MP3/WMA/MPEG4 disc has such a directory structure as shown in the picture above.

Press **Direction key** to choose the root directory and then press **OK** button to enter into the sub directory.

Press **Direction key** to choose the desired track and then press **OK** or **PLAY** to enjoy the music or movie.

If you want to return to the upper menu, press **Direction key** to choose the icon and press **OK** button.

**Filter:** Allows selecting the categories of files displayed in the browser list.

This selection is done among the 3 categories: Audio, Photo and Video.

**Repeat:** To switch different repeat playing mode.

**Mode:** Select different playing mode.

## PICTURE CD PLAYBACK

Normal: Shuffle mode is cancelled.

Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track.

As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different Mode Option.

Music Intro: In this mode, the media will play 10 seconds then skip to next media Edit Mode: To enable programmed playback mode.

When you select the mode, press LEFT **Direction key** to directory and press **OK** to choose the desired track and press **Add to program** to add in programmed playback.


Program view: Display program track.

Browser view: Display track directory.

Add to program: Choose the track press **Add to program** to add the track of the program play directory.


Clear program: In the complete stop state (press the **STOP** button twice), choose the track press **Clear program** to delete the track of the program play directory.

The PICTURE CD disc has such a directory structure as shown in the following picture.

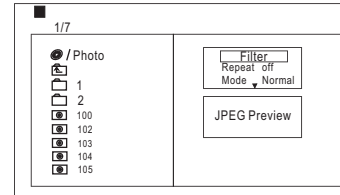 

Press **Direction key** to choose the root directory and then press **OK** button to enter into the sub directory.

Press **Direction key** to choose the desired picture and then press **OK** or **PLAY** to enjoy the picture.

If you want to return to the upper menu, press **Direction key** to choose  the icon and press **OK** button.

### Image rotation

In picture play state, press **Direction key** to rotation the picture, press **ANGLE** button to change the picture scan mode.

## SYSTEM SETUP

### MENU OPERATION

Press the **SETUP** button on the remote control, the **SETUP MENU**(main) will be displayed. After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, then press the **OK** button to confirm. Press **LEFT** direction button return to the menu of upper level. To exit the setup, press the **SETUP** button again. In the **SETUP MENU**, you may choose any of the following options as you like.

### LANGUAGE SETUP

Select **Language** in the setup menu, and display the **Language** submenu:

Language	OSD Language Subtitle
Video	MPEG4 Subtitle
Rating	Audio
Misc	DVD Menu

### OSD Language

Use this item to select the language of the setup menu and screen display.

### Subtitle

This option provides the preset subtitle language. Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.

### MPEG4 Subtitle

Choice different MPEG4 subtitle encoding option.

### Audio

Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option. This option provides the built-in disc dubbing language options.

### DVD Menu

This option provides the film's menu language options. Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.

### VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:

Language	Aspect Ratio
Video	TV System Smart Picture
Rating	
Misc	

### Aspect Ratio

The image display ratio is related to the recorded disc format. Some discs can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a widescreen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

### TV System

This product supports output of various systems, including **NTSC**, **PAL**. If your TV set has only **NTSC** or **PAL** system, the screen will blink and become colorless when a wrong system is selected.

**Note:** For more information of output format, refer to the instructions or your TV set.

### Smart picture

Adjust display effect for video output: Standard: default effect.  
Bright: internal setting for bright view effect.  
Soft: internal setting for soft view effect.  
Dynamic: user adjust brightness, contrast, color etc.

## RATING SETUP

Select **Rating** in the setup menu, and display the Rating submenu:

**Note:** Not all DVD support ratings.

Language	Parental Control Set Password
Video	
Rating	
Misc	

### Parental Control

Selecting a Rating allows the user to set the parental control feature of the player. Select **Parental Control**, and press **OK** to change the different mode.

**Note:** Unlock the password before setting **Parental Control**.

### Set Password

Use the 0-9 keys to input four digits (password), then press **OK** to confirm.

**Note:** If you forget your password, please use the universal password 6666 to unlock.

### MISC SETUP

Select **MISC** in the setup menu, and display the submenu:

\* Use Default Settings Reset setup data to factory default and re-load disc.

Language	Use Default Settings
Video	
Rating	
Misc	

## Trouble-shooting

Carry out the problem-solving measures described in the following section before contacting Customer Support.

Turn off the DVD player immediately as soon as you suspect a malfunction. Unplug the power plug and check whether the DVD player is unusually warm or whether smoke is rising from it.

Problem	Possible cause	Remedy
The DVD player does not work	Disc cover not closed	Close disc cover
	No disc inserted	Insert disc
	Disc inserted the wrong way	Insert disc with label facing up
	Disc dirty or deformed	Clean disc, or insert other disc
	Regional code of the player does not match the regional code of the DVD	Purchase DVD with corresponding regional code
No audio	Moisture on lens	Remove disc and turn off DVD player for at least two hours
	Device not properly connected	Check connections and connect device in the correct way
	Headphones connected (loudspeaker off)	Pull out the headphones
	DVD sound settings incorrect	Check sound settings and set sound correctly
No video	Disc dirty or deformed	Clean disc, or insert other disc
	TV screen is off or in the incorrect video mode	Turn on LCD screen and/or set correct video mode
	Device not properly connected	Check connections and connect device in the correct way
Poor video and/or audio quality	Disc dirty or deformed	Clean disc, or insert other disc
Repeated playback of a section	Loop mode is switched on	Exit the loop mode
	Disc dirty or deformed	Clean disc, or insert other disc
Remote control does not work	Obstacle between remote control and DVD player	Remove obstacle
	Remote control not pointed at DVD player	Point remote control directly at DVD player
	Remote control battery inserted the wrong way	Check the battery's polarity and, if necessary, insert battery correctly
	Battery too low or completely discharged	Insert new battery



## DVB-T PART

### 1. First Time Installation

If you are using the receiver for the first time, a **First Time Installation** menu will be displayed to guide you through the initial setup. Use the remote controller to finish the setup.

Init Install	
OSD Language : English	English
Area : Germany	Fracçais
Time Zone : GMT+1	Espanol
	Deutsch
	Nederlands
	Polski
FTA Default setting	

**A.** At the **First time installation** menu, You can select your regional settings, include your Language, Country, TimeZone .

**B.** Then Select **<OK>** to start the automatic channel search.

**C.** Wait to complete the scanning. In case you want to stop the scanning, press the **<EXIT>** button. The channels already found will still be stored.

**D.** When finished, all active channels found will be stored automatically. The last found channel will be played.

**E.** If you want to **reset** your regional settings and clear all the stored channel, you can select **<FTA Default Setting>** and confirm to **reset it**.

### 2. DVB Mode of Main Menu

Press the **<SETUP>** or **<MENU>** button, the DVB main setup menu appears the screen, then press the **<DOWN>** button to highlight the DVB Menu option.

Installation
Auto search
Manual Search
System setup

### A. Auto Search

Choose the Automatic Search options, This operation same the First Time Installation. Refer to First time Installation.

### B. Manual Search

If any channel is missing after auto search, or you want to add newly launched channels, you can use **Manual Search** to scan the desired channels. To manually search the target channel, you must know its parameters, e.g., the Frequency and Bandwidth. Select **<OK>** button to start manual search. After the channel is found, it is appended to the current channel list. If no signal is found, a message indicating no signal will appear.

Otherwise, selected channel will be saved and appended to the current channel list.

### C. System Setup

#### 1) Language

Press the **<DOWN>** button to highlight the Language options, then Press the **<RIGHT>** button to enter the Language setup.

#### 2) Area

Press the **<DOWN>** button to highlight the Area options, In the Area options, you can choose a kind of the Countries. As: England, Germany, Italy, France, Spain, etc.

#### 3) Time Zone

Select an appropriate time zone to display the local time correctly.

#### 4) FTA Default Setting

If you want to **reset** your regional settings and clear all the stored channel, you can select **<FTA Default Setting>** and confirm to **reset it**.



## Specifications

### 3. Favorite Function

In the DVBT mode, Press the <OK> button, you will see the channel list, then select your favorite channel, then press the <RANDOM/ADD> button to add the favorite channel. Or press the <PROG/DEL> button to remove the favorite channel.

And then you can find the favorite list by press the <REPEAT/FAV> button.

### 4. Trouble Shooting

If you have any questions, please consult the troubleshooting guide below.

#### 1) Unit Not Working

Turn off the power, and then turn it on again.

#### 2) Remote Not Working

Ensure the remote batteries are working.

Point the remote control directly at the player's IR sensor.

Remove any obstacles between the remote and the IR sensor.

#### 3) No picture, no sound

Improper connection with AC adapter or Car adapter.

Use of unauthorized power supply. Power Switch is on OFF position.

#### 4) No image

Whether antenna adjusted correctly;

Whether the correct Channel or Country selected.

May need to reset search.

#### 5) No sound

Whether the sound returned to the end.

Whether earphone plugged in.

Whether press speaker button? Whether press mute button?

#### 6) Diamonds in picture

Whether antenna adjusted correctly; Maybe too weak signal at the receiving place.

#### 7) No signal

Whether the correct Country selected; Maybe signal too weak.

#### 8) Dark picture

Adjust Brightness, Contrast correctly

#### 9) Diamonds in picture or inferior sound during driving.

The signal too weak at that place


Play mode	NTSC/PAL
Disc mode	DVD, VCD, CD, MP3, CD-R, CD-RW, JPEG, DVD+ -R/W, MPEG4,
Video S/N ratio	≥65dB.
Resolution	≥500 lines.
Frequency response	fs 96KHz: 20Hz-20KHz: +/-1dB
Audio S/N ratio	≥90dB
Dynamic range	≥80dB
Distortion	< 0.01%
D/A Converter	96KHz/24bit
Output characteristic	
Input Frequency	VHF 177.5MHz~226.5MHz UHF 474 MHz~858 Mhz
Display Device	Color TFT-LCD
Screen Size	9 inches
Video output	1Vp-p(75 Ω)
Audio output	2CH
Power Voltage	DC IN 12V
Power consumption	≤12W

Specifications are subject to change without notice.



## Other

Power supply adaptor :

Output: 12V  $\equiv$  1A 

Input: 100-240V ~ 50-60Hz 0.3A

Manufacturer: SHENZHEN MTC CO.,LTD

Model number :DC 120100110

Adaptor type: AC Adaptor

Use only original AC adaptor

Use only the power supply listed in the user instructions.

Other possible causes for problems:

Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, disconnect the power plug from the mains socket and plug it back in. If the problem persists, disconnect the device from the mains again and contact Customer Service or a repair shop.

Service and support

For information: [www.lenco.com](http://www.lenco.com)

For support: <http://lencosupport.zendesk.com>

Lenco helpdesk:

Germany	0900-1520530	(Local charges)
The Netherlands	0900-23553626	(Local charges + 1ct p/min)
Belgium	02-6200115	(Local charges)
France	03-81484280	(Local charges)

The helpdesk is accessible from Monday till Friday from 9 AM till 6 PM. When contacting Lenco, you will always be asked for the model and serial number of your product. The serial number can be found on the back of the device. Please write down the serial number below:

Model: DVP-9411

Serial number: \_\_\_\_\_

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.

Important note: If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).



Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

©All rights reserved



**ENERG**  
енергия · ενεργεια

Y IJA  
IE IA

I Lenco

II DVP-9411



**A**

ENERGIA · ЕНЕРГИЯ  
ENERGEIA · ENERGIJA  
ENERGY · ENERGIE  
ENERGI



**9**  
Watt

**13**  
kWh/annum

**22,86**  
cm



**9**  
inch

2010/1062 - 2011