


Lenco

INSTRUCTION MANUAL

FM RADIO WITH iPod/iPhone DOCKING


MODEL: IPD-5250

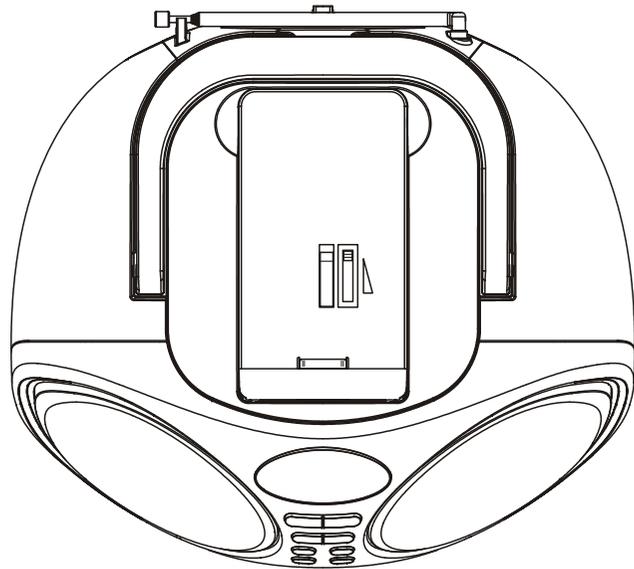

Please read following instructions prior to operating your unit.


Manufacturer of this unit follows a principle of continuous improvement and has no responsibility for any changes that are made to the unit nor any liability for these changes. Thanks for your choice of our products.

For information and support, www.lenco.eu

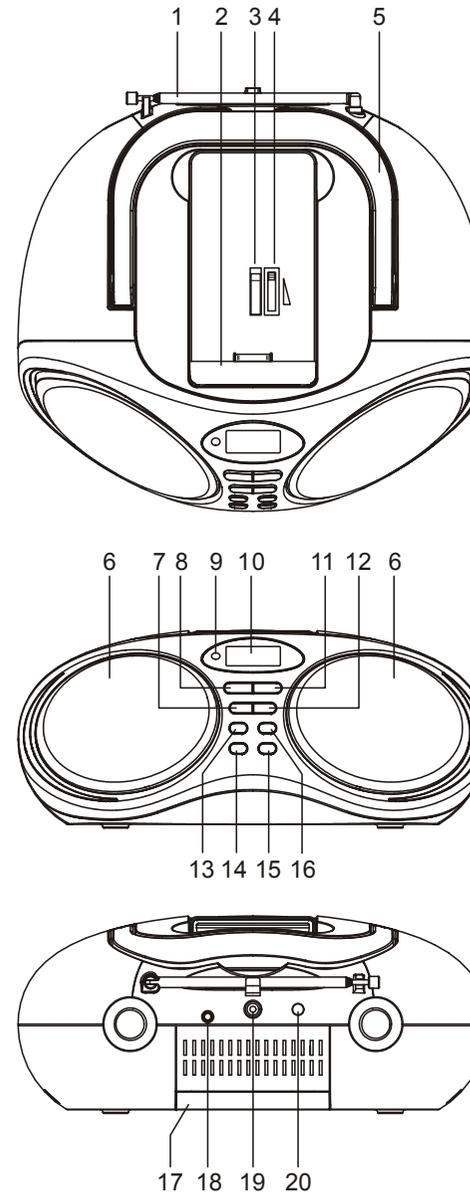

MAIN UNIT

1. FM ANTENNA
2. iPod/iPhone DOCKING
3. BRACKET
4. BRACKET ADJUSTING BUTTON
5. HANDLE
6. SPEAKERS
7. MEMORY BUTTON
8. FUNCTION BUTTON
9. REMOTE SENSOR
10. LCD DISPLAY
11. STANDBY BUTTON
12. TUNE BUTTON
13. CH- BUTTON
14. VOL- BUTTON
15. VOL+ BUTTON
16. CH+ BUTTON
17. BATTERY COMPARTMENT
18. AUX IN JACK
19. VIDEO OUT JACK
20. DC IN JACK

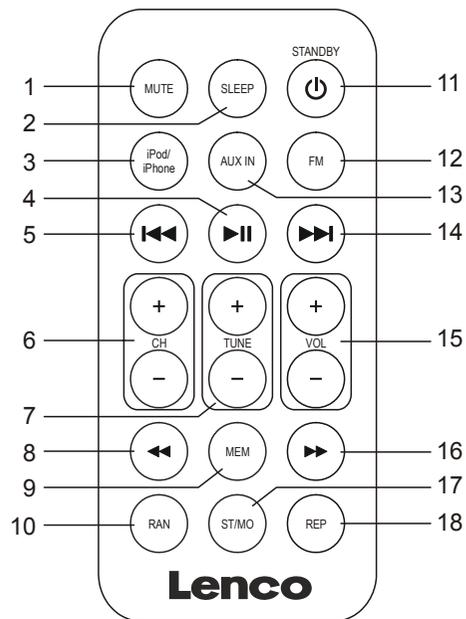

1. MUTE BUTTON
2. SLEEP BUTTON
3. iPod/iPhone BUTTON
4. PLAY/PAUSE BUTTON
5. PREVIOUS BUTTON
6. CH+/- BUTTON
7. TUNE+/- BUTTON
8. FAST BACKWARD BUTTON
9. MEM BUTTON
10. RAN BUTTON
11. STANDBY BUTTON
12. FM BUTTON
13. AUX IN BUTTON
14. NEXT BUTTON
15. VOL+/- BUTTON
16. FAST FORWARD BUTTON
17. ST/MO BUTTON
18. REP BUTTON

NOTE: During playback, the connected iPod/iPhone may skip to another song accidentally. Once the problem occurs, please set the iPod/iPhone to shake off.

FM RADIO TUNING THE FM RADIO

1. Power on the unit, switch to RADIO mode by pressing FUNCTION button on the unit repeatedly or pressing FM button on the remote.
2. Press TUNE+/- button on the remote to fine tune the radio station. Press and hold TUNE+/- buttons on the remote to auto search radio station forward or backward respectively or press TUNE button on the unit to tune the radio station automatically. When an available station will be found, the unit will broadcast it immediately and the searching will be stopped.
3. Press ST/MO button on the remote to switch between FM mono and FM stereo modes.

STORING YOUR FAVORITE RADIO STATION

1. During playback, press MEM button on the remote or press MEMORY button on the unit, "MEM" flashes on the screen with a memory cell number.
2. Press CH+/- button to select the corresponding memory cell among P01-P20 for storing the station.
3. Press MEM button on the remote or MEMORY button on the unit to store the current station to the selected memory cell.
4. During radio playback, press CH+/- button to recall the stored stations.

AUX IN

Follow below steps to connect the unit to another audio device like MP3 player and the like:

1. Connect the Audio Out of the device to AUX IN jack with audio cable.
2. Press STANDBY button to turn the unit on.
3. Press FUNCTION button on the unit repeatedly or press AUX IN button on the remote to switch the unit to AUX mode.
4. Power on the device and begin playback.

MUTE

During playback, press MUTE button to switch off the audio, press the button again to resume the audio.

VOLUME LEVEL JUSTMENT

During playback, press VOL +/- button to adjust the volume output level.

VIDEO OUTPUT

1. Dock the iPod/iPhone to the unit.
 2. Connect a RCA cable to the Video Out on the unit and a television.
 3. Power on the TV set and the unit. Press FUNCTION button on the unit repeatedly or press iPod/iPhone button on the remote to switch to iPod mode.
 4. Adjust the connected television to the proper input setting.
 5. Video from a docked iPhone/iPod can now be played through the unit to the connected television.
- Note: Make sure the docked iPhone or iPod's TV out option is turned on.

POWER SUPPLY

Plug the adapter to the unit and the main power.

SLEEP TIMER SETTING

Following the below instructions to set the sleep time at power on mode:

During playback, press SLEEP button repeatedly to cycle through the sleep time options:

90 ➡ 60 ➡ 30 ➡ 15 ➡ 05 ➡ OFF

Once the options you want shows on the screen, release the sleep button.


After setting the sleep time, you can operate the unit freely. When the set sleep time has expired, the unit will automatically power off.

iPod/iPhone OPERATING

PLAYING AN iPod/iPhone

1. Dock the iPod/iPhone on to the unit. Power on the unit by pressing STANDBY button, then press FUNCTION button on the unit repeatedly or press iPod/iPhone button on the remote to switch to iPod/iPhone mode.
2. Press PLAY/PAUSE button to start/pause the playback.
3. Press NEXT button to skip to the next track/chapter. Press PREVIOUS button to skip to the previous track/chapter.
4. Press and hold FAST FORWARD/BACKWARD button to search through the track/ chapter forward or backward.
5. Press RAN button to enable or disable random playback.
6. Press REP button repeatedly to repeat a single track/chapter, repeat all tracks/chapters or disable the repeat function.

CONNECTING WITH OTHER APPLIANCES

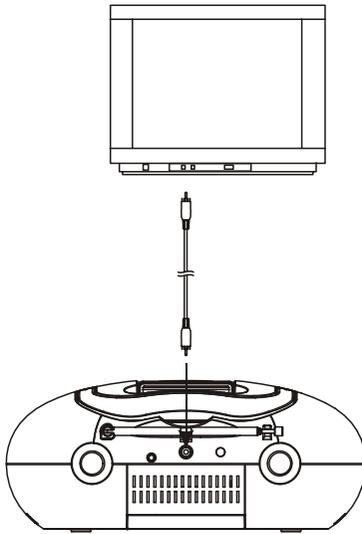

TROUBLE SHOOTING

Symptom	Possible Cause	Solution
Radio sound distorted.	<ol style="list-style-type: none"> 1. The station is not tuned in. 2. There is a poor signal. 	<ol style="list-style-type: none"> 1. Fine tune the station. 2. Adjust the length and the direction of the FM antenna.
No radio sound.	<ol style="list-style-type: none"> 1. The unit is not in radio mode. 2. The volume is on the minimum setting or the unit is muted. 	<ol style="list-style-type: none"> 1. Press FUNCTION button on the unit repeatedly or press FM button on the remote to switch to radio mode. 2. Adjust the volume level or press MUTE button again to resume the audio.
The iPod will not play	<ol style="list-style-type: none"> 1. The unit is not in iPod mode. 2. The iPod is not connected correctly. 	<ol style="list-style-type: none"> 1. Press FUNCTION button on the unit repeatedly or press iPod/iPhone button on the remote to switch to iPod. 2. Reconnect the iPod.
No iPod sound.	<ol style="list-style-type: none"> 1. The unit is not in iPod mode. 2. The volume is on the minimum setting or the unit is muted. 	<ol style="list-style-type: none"> 1. Press FUNCTION button on the unit repeatedly or press iPod/iPhone button on the remote to switch to iPod. 2. Adjust the volume level or press MUTE button again to resume the audio.

IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the mains plug of the apparatus or the appliance coupler shall be disconnected from the mains completely.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Minimum distances 2.0cm around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus is in tropical and/or moderate climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The marking plate is located at the bottom of the apparatus.

SPECIFICATIONS:

Power source: DC 5V/2.0A

Power consumption: 10W

Remote control: CR2025

Receiving bands: FM 87.5 -108 MHz

Dimensions: 260(L) x 230(W) x 108(H) mm

Operating Humidity Range: 10 % to 75 %



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)