


User's Manual

MP card

MP3 Player

Get to know the controls on Player

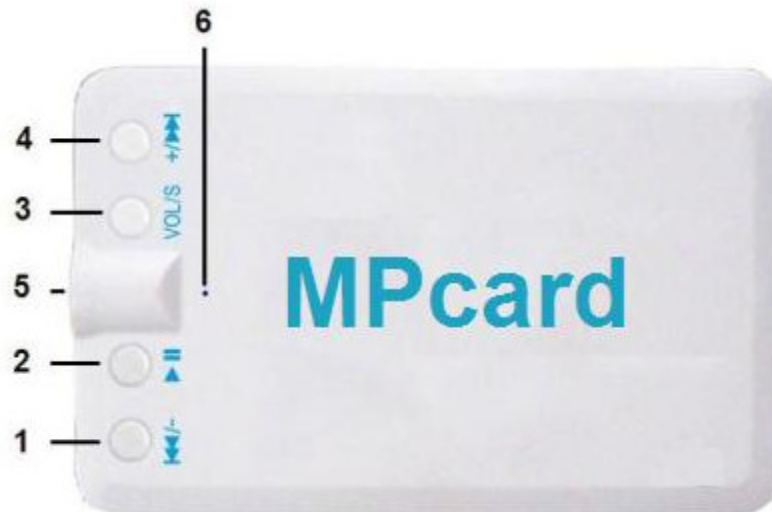

Item	Description
1	⏮ / - (Previous / Fast-Backward, Volume level decrease)
2	▶ (Play / Pause, On / Off)
3	VOL / S (Volume Control / Shuffle)
4	+ / ⏭ (Next / Fast-Forward, Volume level increase)
5	Earphone Output Jack (2.5mm) (Earphone / PC Connection / Charging / Built-in Reset Function)
6	LED Indicator

A. About Player Battery

Player has an internal, non-user-replaceable battery. For best results, the first time you use the player, let it charge for about 2 - 3 hours or until the status LED indicator light go Off, before you use it.

Note: Player continues to use battery power after it's been turned off, if unit isn't used for a while, the battery might need to be charged.

B. Charging the Battery

You can charge the Player's battery in two ways:

1. Connect player to your computer. Or,
2. Use the USB power charger. (available separately)

Note: For maintain the rechargeable battery performance, please disconnect the player with the computer or

power charger when it is done.

C. Connecting and Disconnecting Player


You can connect the player to your computer to upload / download those music files, and charging the battery, disconnect them when you're done.

To Connecting Player:

1. Plug the 2.5mm jack plug of USB cable to the Player multi-function earphone jack, then plug the other side USB plug into a USB port on your computer, then the computer will detecting and installing driver automatically. And removable disk drive(s) will display in "My computer" folder (for Windows 2000 / XP system or above). Or,
2. An "Untitled" icon will display on desktop indicating the player is removable disk(s). (for MAC 9.2 system or above)
3. Now the player is ready for music files upload / download with your computer.
4. You can transfer the music files by using the computer mouse and drag and place, or copy and paste, in between the player and computer.

To Disconnecting Player:

It's important not to disconnect player while it's syncing. Don't disconnect, if you have uploading or downloading music files with your computer.

5. To eject the connection, press the  button, then you will see the relevant removable disk is removed and default sound for hardware remove is hear from you computer. Or,
6. If you're using a Windows system PC, you can disconnect the player in My Computer or by clicking the "Safely Remove Hardware" icon in the Windows system tray, select the correspondence name of USB Device and choose Stop > Confirm > Confirm follow by the pop up windows from computer.
7. If you're using a Mac, you can also disconnect player by dragging the player icon on the desktop to the Trash.
8. And, now is safe to disconnect the player with your computer, unplug the player from your computer.
9. If you're accidentally disconnect player without disconnect it, reconnect it to your computer and sync again. (Some media file will be loss if this circumstance happen)

Note: The player will go to play mode automatically when you disconnect the player with your computer or charger. Please turn it Off when you don't use it.

D. LED Indicator Light

1. **In Power OFF Mode:** No light.
2. **In Music Playing Mode:** Light flashing (about once per second)
3. **In Music Pause Mode:** Light bright.
4. **In PC connection / Charging Mode:** Light bright
5. **Charging Complete:** Light Off

E. Getting Start Player

Turn Player ON / OFF and Playing Music:

1. Plug the stereo earphone plug into the earphone output jack. Press and hold ►|| button to turn ON the Player. The music will play and status LED indicator will light and flashing.
2. To turn OFF the Player, press and hold ►|| button.

To Adjust Volume Levels

3. Press the “VOL / S” to enter volume control mode, the LED light will stop flashing for 6 – 8 seconds. Then,
4. Pressing or press and hold “◀◀ / -“ or “+ / ▶▶” button to decrease / increase volume levels before the LED light flashing again.

To Play / Pause Music

5. In music playing mode, press ►|| button to pause playing music
6. Press ►|| again to continue the play.

To Changing Music

7. Press ►▶ button to change to next song.
8. Press ◀◀ button to change to previous song.
9. Press and hold ►▶ button to fast forward music.
10. Press and hold ◀◀ button to fast backward music

To Change Normal / Shuffle

11. Press and hold “VOL / S” button for 2 - 3 seconds to enter “Shuffle” play mode and the LED light flashing will turn to slow for about once per 2 seconds.
12. Press and hold “VOL / S” button for 2 – 3 seconds again to return to “Normal” play mode and the LED light flashing will turn back to normal as music playing mode for about once per seconds.

F. To Reset Player

In some circumstances the device may hanging and need to reset. This player has design with built-in a mini tact switch which located at the behind of the earphone jack, so it can provide the reset function to restart the device pass through the earphone jack hole.

To Reset

1. Use a wooden stick (less than 2mm dia.) or similar object, such as tooth stick and cut out the sharp side, and carefully insert the stick, use dull side, into the earphone jack hole until you feel to hit the end. Actually that is the tact switch button surface.
2. Then add a bit of force and you will get a click sound and feeling return from switch. The device is reset, all settings are back to factory default and the device will go into music playing mode automatically.

Important: Do not reset the device if it is proper working.

G. Troubleshooting:

Play cannot turn ON	<ul style="list-style-type: none">■ Check whether battery have enough energy.
No sound is heard	<ul style="list-style-type: none">■ Check whether Volume is set to “minimum” and connect the headphone plugs firmly.■ Check whether the headphone plug is dirty.■ Corrupted MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.■ Check whether music files format are support.
Download of music files fails.	<ul style="list-style-type: none">■ Check whether player’s USB connector is connected with computer properly.■ Check whether driver is installed correctly.■ Check whether the player’s memory is in full.

H. Specifications:

Dimension	86mm (H) x 55 (W) x 7.2mm (D)	
Weight	39g	
PC Connection	USB1.0 / 1.1 / 2.0	
Earphone Impedance	32 Ohm	
Battery	Built-in Rechargeable Li-ion: 3.7V 120mAh	
	Playing Time: 6 - 7 Hours	
Music Format	MP3	32kbps - 320kbps
	WMA	32kbps – 384kbps
Audio	Max. Earphone Output Power	L: 150mVrms + R: 150mVrms (32 Ohm)
	Frequency response	20Hz – 20,000Hz
	SNR	60dB
Operation Temperature	0°C - 40°C	
Operation Systems	Windows 2000 / XP / Vista, MAC 9.2 or above	

Note: Product design and specification are subject to change without prior notice.

I. Recycling



If at any time in the future you should need to dispose of this product, please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)