

# Lenco

## XEMIO-253 MP3-Player



## User manual

[www.lenco.com](http://www.lenco.com)

## Special Features

- Elegant appearance and easy to use.
- Multi-Code Player - Supporting MP3, WMA, formats.
- Driver Free U Disk - You may manage your files directly through "Portable Device" in "My Computer" on Windows 2000 Operating System or above without driver.

## Brief View of Player

### A. About player's battery

Player has an internal, non-user-replaceable rechargeable lithium battery. For best results, the first time you use the player, let it charging for about 1 - 2 hours or until the charging LED lights go Off before you use it.


### Charging the Battery

You can charge the Player's battery in two ways:

1. Connect player to your computer. Or,
2. Use the USB power charger. (available separately)

### B. Key function of buttons

#### Appearance

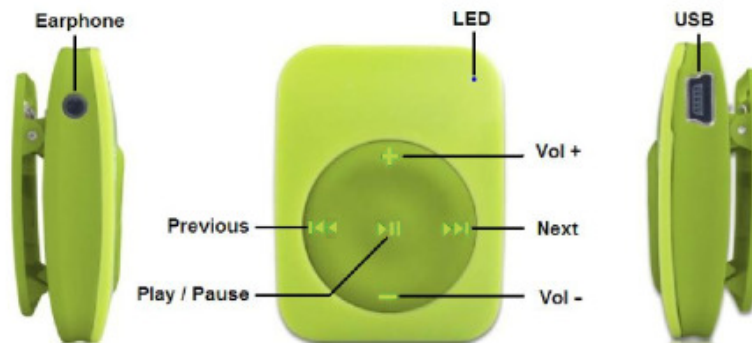

- **▶|| button:** To Play / Pause, On / Off.
- **◀◀ button:** To previous song or fast-backward.
- **▶▶ button:** To the next song or fast-forward.
- **+ button:** To increase volume level.
- **- Button:** To decrease volume level.
- **USB:** For PC connection and charge function

### **C. Getting start player**

#### **1 Turn On / Off**

- 1.1 Plug in earphone set into player's jack
- 1.2 Press and hold **▶||** button, for about 3 - 4 second, the player will turn On and the music will play directly.
- 1.3 Press and hold **▶||** button, for about 3 - 4 second, to turn Off the player.

#### **2 Play / Pause Music**

- 2.1 Press **▶||** button to pause the playing music, press it again to play.
- 2.2 If player is in pause state for 3 minutes, it will be turned to Off automatically.

#### **3 Adjust Volume**

- 3.1 Pressing **+ / -** button to increase or decrease volume level.
- 3.2 Press and hold **+ / -** button to increase or decrease volume level faster.
- 3.3 For hearing protection; a beep warning will be heard from earphone every time you increase the volume level and reach to the default setting level, which may exceed 85dB. Press **▶||** button to accept the warning and press **+ / -** button again to increase the level until to maximum level.

#### **4 Play Next / Previous Music**

- 4.1 In playing mode, press ►► button to select next music.
- 4.2 Press ◀◀ button to select previous music.

## **5 Play Fast-Forward / Fast-Backward**

- 5.1 In playing mode, press and hold ►► button to enter fast-forward mode.
- 5.2 Press and hold ◀◀ button to enter fast-backward mode.

## **D. USB mode**

### **1 Connect player to computer**

- 1.1 Connect player to computer with the USB cable, then a "USB Mass Storage Device" is detected and related driver is installed by you computer. (Windows 2000 / XP System or about)
- 1.2 A removable disk drive will be shown in "My computer" folder, now you can start Read / Write operation. And the battery is charging in background.
- 1.3 In connection mode, the player can be play music if you press or pressing the play button. However, the player may stop or start playing if removing the PC connection.

### **2 Remove player from computer:**

Please safety to removes the player in computer, otherwise, the data stored in the Player might loss.

- 2.1 If you're using a Windows PC, you can disconnect the player in My Computer or by clicking the "Safely Remove Hardware" icon in the Windows system tray.
- 2.2 If you're using a Mac, you can also disconnect player by dragging the player icon on the desktop to the Trash.

- 2.3 And now, is safe to disconnect the player with your computer, unplug the USB connector from player and then your computer.
- 2.4 If you're accidentally disconnect player without disconnect it, reconnect it to your computer.
- 2.5 At power ON mode, after remove the PC connection, the player will auto-play the music directly.

**E. Indicator light function**

- **Playing Mode:** Red light flashing once per second.
- **Pause Mode:** Red light bright.
- **PC Connecting Mode:** Red light bright. (Charging in background)
- **Recharging Mode:** Red light bright.
- **Recharge complete:** Red light will turn OFF

**F. Troubleshooting**

Play cannot turn ON	<ul style="list-style-type: none"> <li>• Check whether battery have enough energy.</li> </ul>
No sound is heard	<ul style="list-style-type: none"> <li>• Check whether Volume is set to "minimum" and connect the headphone plugs firmly.</li> <li>• Check whether the headphone plug is dirty.</li> <li>• Corrupted WMA / MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.</li> <li>• Check whether music files format are support.</li> </ul>
Download of music files fails.	<ul style="list-style-type: none"> <li>• Check whether player's USB connector is connected with computer properly.</li> <li>• Check whether driver is installed correctly.</li> <li>• Check whether the player's memory is in full.</li> </ul>

**G. Specification**

Dimension	45.5 mm (H) x 35 mm (W) x 18 mm (D)	
Weight	15g	
PC Connection	USB 2.0 (High Speed)	
Earphone Impedance	32 Ohm	
Internal Memory	Flash memory: Xemio-243 2GB Xemio-253 4GB	
Battery	Built-in Rechargeable Lithium battery (3.7V 110mA)	
	Playing Time: about 6 – 7 Hours	
Supports Music Format	MP3	32kbps - 320kbps
	WMA	32kbps – 384kbps
Audio	Earphone Output Power	L: 275mVrms + R: 275mV (32 Ohm)
	Frequency Response	20Hz – 20,000Hz
	SNR	80dB
Operation Temperature	-0°C - 40°C	
Operation Systems	Windows 98/SE/ME2000/XP/Vista, MAC 9.2 or above	

**Note:** Product design and specification are subject to change without prior notice.

## Safety instructions

### IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.



**CAUTION**  
**RISK OF ELECTRICAL SHOCK**  
**DO NOT OPEN**

CAUTION: TO PREVENT AN ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS. THERE ARE NO USER SERVICEABLE PARTS INSIDE. REQUEST A QUALIFIED SERVICE PERSON TO PERFORM SERVICING.



This symbol indicates that there are important operating maintenance instructions in the user manual accompanying this MP3.



This symbol indicates that dangerous voltage is present within this MP3, constituting a risk of electric shock or personal injury.

**Keep these instructions in mind:**

- Do not use this device near water.
- Clean only with a slightly damp cloth.
- Do not cover or block any ventilation opening. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
- Install in accordance with the supplied user manual.

- 
- Don't step on or pinch the power cord. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power cord, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
  - Unplug this device during lightning storms or when unused for a long period.
  - Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products.
  - Avoid using the device near strong magnetic fields.
  - ESD can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.

**Safety instructions - continued**

- **WARNING! NEVER INSERT AN OBJECT INTO THE PRODUCT THROUGH THE VENTS OR OPENINGS. HIGH VOLTAGE FLOWS THRU THE PRODUCT AND INSERTING AN OBJECT CAN CAUSE ELECTRIC SHOCK AND/OR SHORT CIRCUIT INTERNAL PARTS. FOR THE SAME REASON, DO NOT SPILL WATER OR LIQUID ON THE PRODUCT.**
- Do NOT use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
- Do not use this device when condensation may occur.

This MP3 is produced according to all current safety regulations. The following safety tips should safeguard users against careless use and dangers involved with such use.

- Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive




---

build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.

- This device must be well ventilated at all time!
- This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
- The socket outlet must be installed near the equipment and must be easily accessible.
- Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.
- Keep away from rodents. Rodents enjoy biting on power cords.
- Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
- Avoid placing the device on any surfaces that may be subject to vibrations or shocks.
- When the device is not in use for long periods, unplug the AC power cable for safety reasons.
- To clean the device, use a soft dry cloth. Do NOT use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
- The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- If the device will not be used for an extended period, please charge the battery at least once per month to maintain battery life.

---

## Safety instructions - continued

- Charge the battery if:
  - a) The battery level icon displays  (An empty battery)
  - b) The device switches off automatically when restarted.
- Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.



**WARNING:** Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.



BEFORE SENDING YOUR DEVICE TO Lenco DO NOT FORGET TO BACKUP YOUR DATA. SUPPLIER IS NOT LIABLE FOR ANY DATA LOSS.



Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

---

## Service and support

For information: [www.lenco.com](http://www.lenco.com)

For support: <http://lencosupport.zendesk.com>

### Lenco helpdesk:

Germany	0900-1520530	(Local charges)
The Netherlands	0900-23553626	(Local charges + 1 ct p/min)
Belgium	02-6200115	(Local charges)
France	03-81484280	(Local charges)

The helpdesk is accessible from Monday till Friday from 9 AM till 6 PM.

When contacting Lenco, you will always be asked for the model and serial number of your product. The serial number can be found on the back of the device. Please write down the serial number below:

Model: XEMIO-253

Serial number: \_\_\_\_\_

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

**Important note:** It is not possible to send products that need repairs to Lenco directly.

**Important note:** If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).



Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

The declaration of conformity may be consulted at  
<http://www.lenco.eu/supportfiles/CE/fgeiofha89fef.pdf>

©All rights reserved